

GO

by Celerway

Activation Guide

ADMINISTRATION QUICK START
CELERWAY GO MODELS: GO CWY-M5.1E2L2W2B
GO CWY-M5.1E2L2W2BA, GO CWY-M5.1E2L1W2B



Welcome to Celerway GO, the most powerful and compact remote work product in the world. GO uses multiple networks at the same time to give you a secure internet connection from anywhere, without the need for an external power source.

This guide will show you how to activate your GO device. For complete guides on how to administer GO, please visit nimbus.celerway.com.

If you have activated this device for an end user within your organization, refer them to the Celerway GO User Guide.


Release 1.1 © 2020 Celerway Communication AS

Activate GO

IMPORTANT: complete GO activation within 20 minutes of powering on the device. Otherwise, it may overheat because its cooling system is enabled only upon activation.

0 Obtain a license key

Log in to Nimbus at nimbus.celerway.com, Celerway's cloud-based remote administration system. Under the License tab, from among the list of valid license keys for your organization, select a license key that has not been activated.

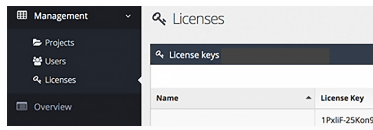

Ensure that the battery level of the device is at least 50% before proceeding with activation. For information about the device such as SIMs, ports and LEDs indicators, see the Celerway GO User Guide that came with the device, or go to nimbus.celerway.com/public.

1 Power on GO

To power on GO, press the power button to the left of the SIM card slots, holding the button down for 5 seconds.

2 Connect a laptop/computer to GO

- » To connect a laptop/computer to GO by Ethernet cable, insert one end of the cable in the GO LAN port, and the other end in the Ethernet port of your computer.
- » To connect a laptop/computer to GO by Wi-Fi, search on your computer for the Wi-Fi network named CelerwayXXXXXX (where the Xs are digits/letters), and log in to Wi-Fi with the password CelerwayXXXXXXtest (where the Xs are the same digits/letters as in the network name).

3 Access the GO License Registration page

To access the registration page, open a web browser to <http://192.168.4.1>.

4 Connect GO to the internet using its WAN port, Wi-Fi radio, or LTE connections


4A By WAN port

Insert the Ethernet cable that is connected to the internet with DHCP in the WAN port of the GO router.

4B By Wi-Fi

1. Select the Network menu tab.
2. In the Wifi menu tab, click Scan to see available networks.
3. To choose the network, click Select.
4. Enter the password for the selected Wi-Fi network and click Connect.


Note that Wi-Fi behind a captive login portal is not supported from the activation menus.

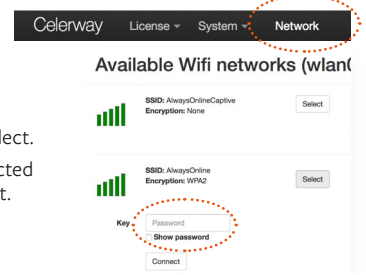

4C By LTE

If the SIMs installed do not require pin codes or special APNs, GO should be online. If your SIM cards require special configuration:

1. Select the Network menu tab.
2. In the Modems menu, if a SIM requires a PIN, a PIN code field will appear to the right of the modem information. Enter the PIN and click Unlock.
3. If the SIM card requires a special APN, copy the ICCID number for the Modem. Note that GO stores APNs for most mobile operators.
4. Go to the APN menu tab and paste the ICCID in the empty field.
5. Type the APN in the APN field, click Add and Restart modem(s).
6. The APN is now activated. For a private SIM card and network, you may be required to enter a username and password in the APN menu tab.

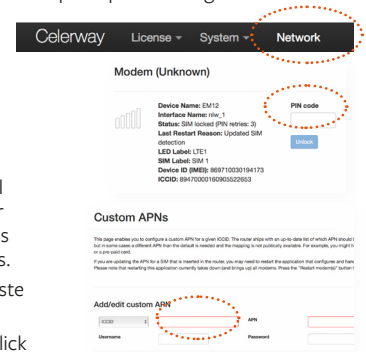

5 Enter GO license key

1. Select the License menu tab.
2. Enter a valid license key that has not been assigned to another Celerway device, and click Proceed.
3. GO will validate the license key against Celerway's Nimbus license key server.
4. Once the license key has been validated, GO will then install the latest firmware and appear in Nimbus in the group for which the license key was generated.

Note to verify that GO has an active internet connection, enter google.com in the Ping field and click Ping.



Administration

Remote administration with Nimbus access the router UIs remotely at nimbus.celerway.com, where further guides are available under the Documentation menu.

Local administration access the router UIs when connected to GO. For connection instructions, see step 2 in this guide.

- » **Complete Admin router UI** access in web browser at <http://192.168.5.1>, with the default username **admin** and the password **celerway**. This number will be different if you change the IP address of the router. With the Admin UI, you can change the username and password for both Admin and Basic router UIs and also disable the Basic router UI.
- » **Basic end-user router UI** for basic configuration, access in web browser at <http://192.168.5.1/basic>, with the default username **basic** and the password **celerway**. This number will be different if you change the IP address of the router.