

# GO

## Battery Guide v1.0

This guide shows you how to use GO safely and effectively in different battery operation scenarios.

For detailed battery safety information, refer to the GO User Guide that came with your device.

### When you keep GO stationary

» While using GO to work at your home office or other stationary work area, remove the battery and only run GO using the included charger. Doing so will preserve the battery life and prevent damage to the device.

» Do not charge mobile devices for extended periods using GO.

### When you need to operate GO on battery power for more than 7 hours

» During field operations when you need to operate GO on battery power for more than seven hours, you can carry a spare GO battery and replace the depleted one as needed.

### If the GO battery is weakened or damaged

» Be sure to keep the depleted battery dry and away from heat sources.

» With use and over time, the battery's capacity or ability to hold a charge may decrease, and the battery may become damaged, whether through repeated charging for long periods, or by dropping or overheating it.

» Replace your GO battery with a new one if it is weakened or damaged.

## Accessing the battery in GO



1. Power off GO by pushing the power button and holding it in for 3 seconds. When no LEDs are green, GO is powered off.
2. Using a crosshead screwdriver, remove the battery cover screw on the back of the device and lift off the cover as shown.



## Removing the battery from GO

3. Using your fingers, lift the battery out of its compartment from the bottom end (the end with USB-C ports) as shown here. It should dislodge easily unless it has been kept in place with tape.

4. Move the battery aside from its compartment to expose the wires connecting it to the device.

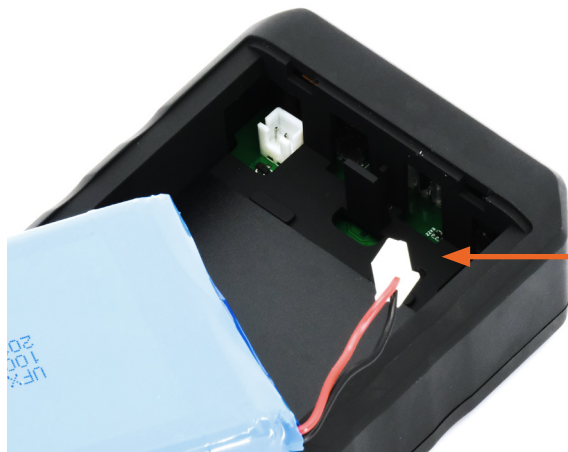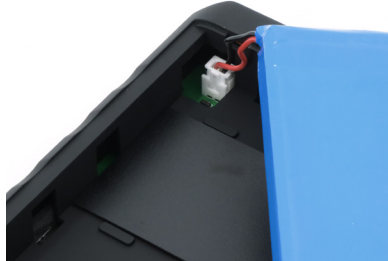

5. Unplug the battery by gently pulling out the white connector as shown here.

6. To prevent dust and other material from entering the battery compartment, reattach the battery cover and secure it with the battery cover screw.

## Inserting a battery in GO

1. Ensure GO is powered off. When no LEDs are lit, GO is powered off.
2. Using a crosshead screwdriver, remove the battery cover screw on the back of the device and lift off the cover as shown in the section "Accessing the battery in GO".

3. Locate the white battery connector attached to the GO battery and plug it into the socket found at the bottom right of the battery compartment.
4. Place the battery in the battery compartment.
5. Reattach the battery cover by securing it with the battery cover screw.

**Have questions or need help?** Please contact us at [info@celerway.com](mailto:info@celerway.com).